


# VPOD CapOx Patient Self Administered Overnight Oximetry and Capnography Instructions on Oxygen

Patient Name	Reading ID
Your prescriber ordered this oximetry and capnogratidal CO <sub>2</sub> levels while you are asleep. It is vital you results.	
VirtuOx is the testing facility that will process the to Medicare guidelines, the company that delivers the instruction or performance of the test.	· · · · · · · · · · · · · · · · · · ·
DME Courier:	Phone
Please follow the conditions below as preso	cribed:


## Your testing device: VPOD CapOx

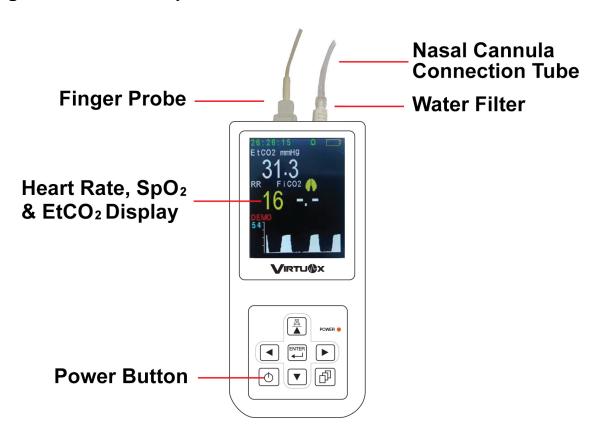


### **IMPORTANT**

- You must stay awake for the first 10 minutes of the test.
- Remove any fingernail polish and coverings from the finger you will be using.


### **TEST SETUP**

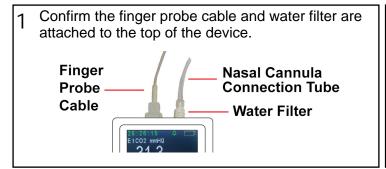





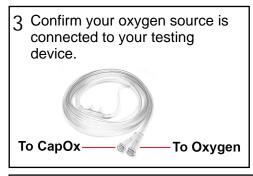



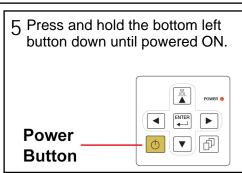

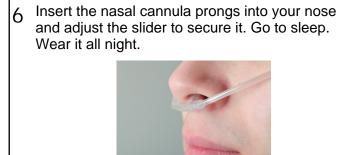

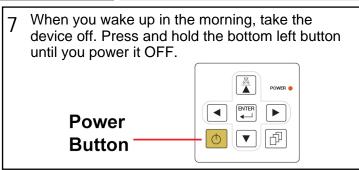

## **ADDITIONAL INSTRUCTIONS**

- For best results, place the probe on your index finger. However, you may use any finger as long as it receives a reading from the device.
- If the probe or cannula falls off during the night:
  - 1) Place the probe on your finger and reinsert the nasal cannula prongs into your nose.
  - 2) Check to see the oximeter is ON and displays numbers.
  - 3) If the oximeter is OFF, press the power button to turn it ON.
- You may remove the probe and nasal cannula only in case of hygienic necessity. When you return to bed, put the probe back on your finger and reinsert the nasal cannula as you did before.